
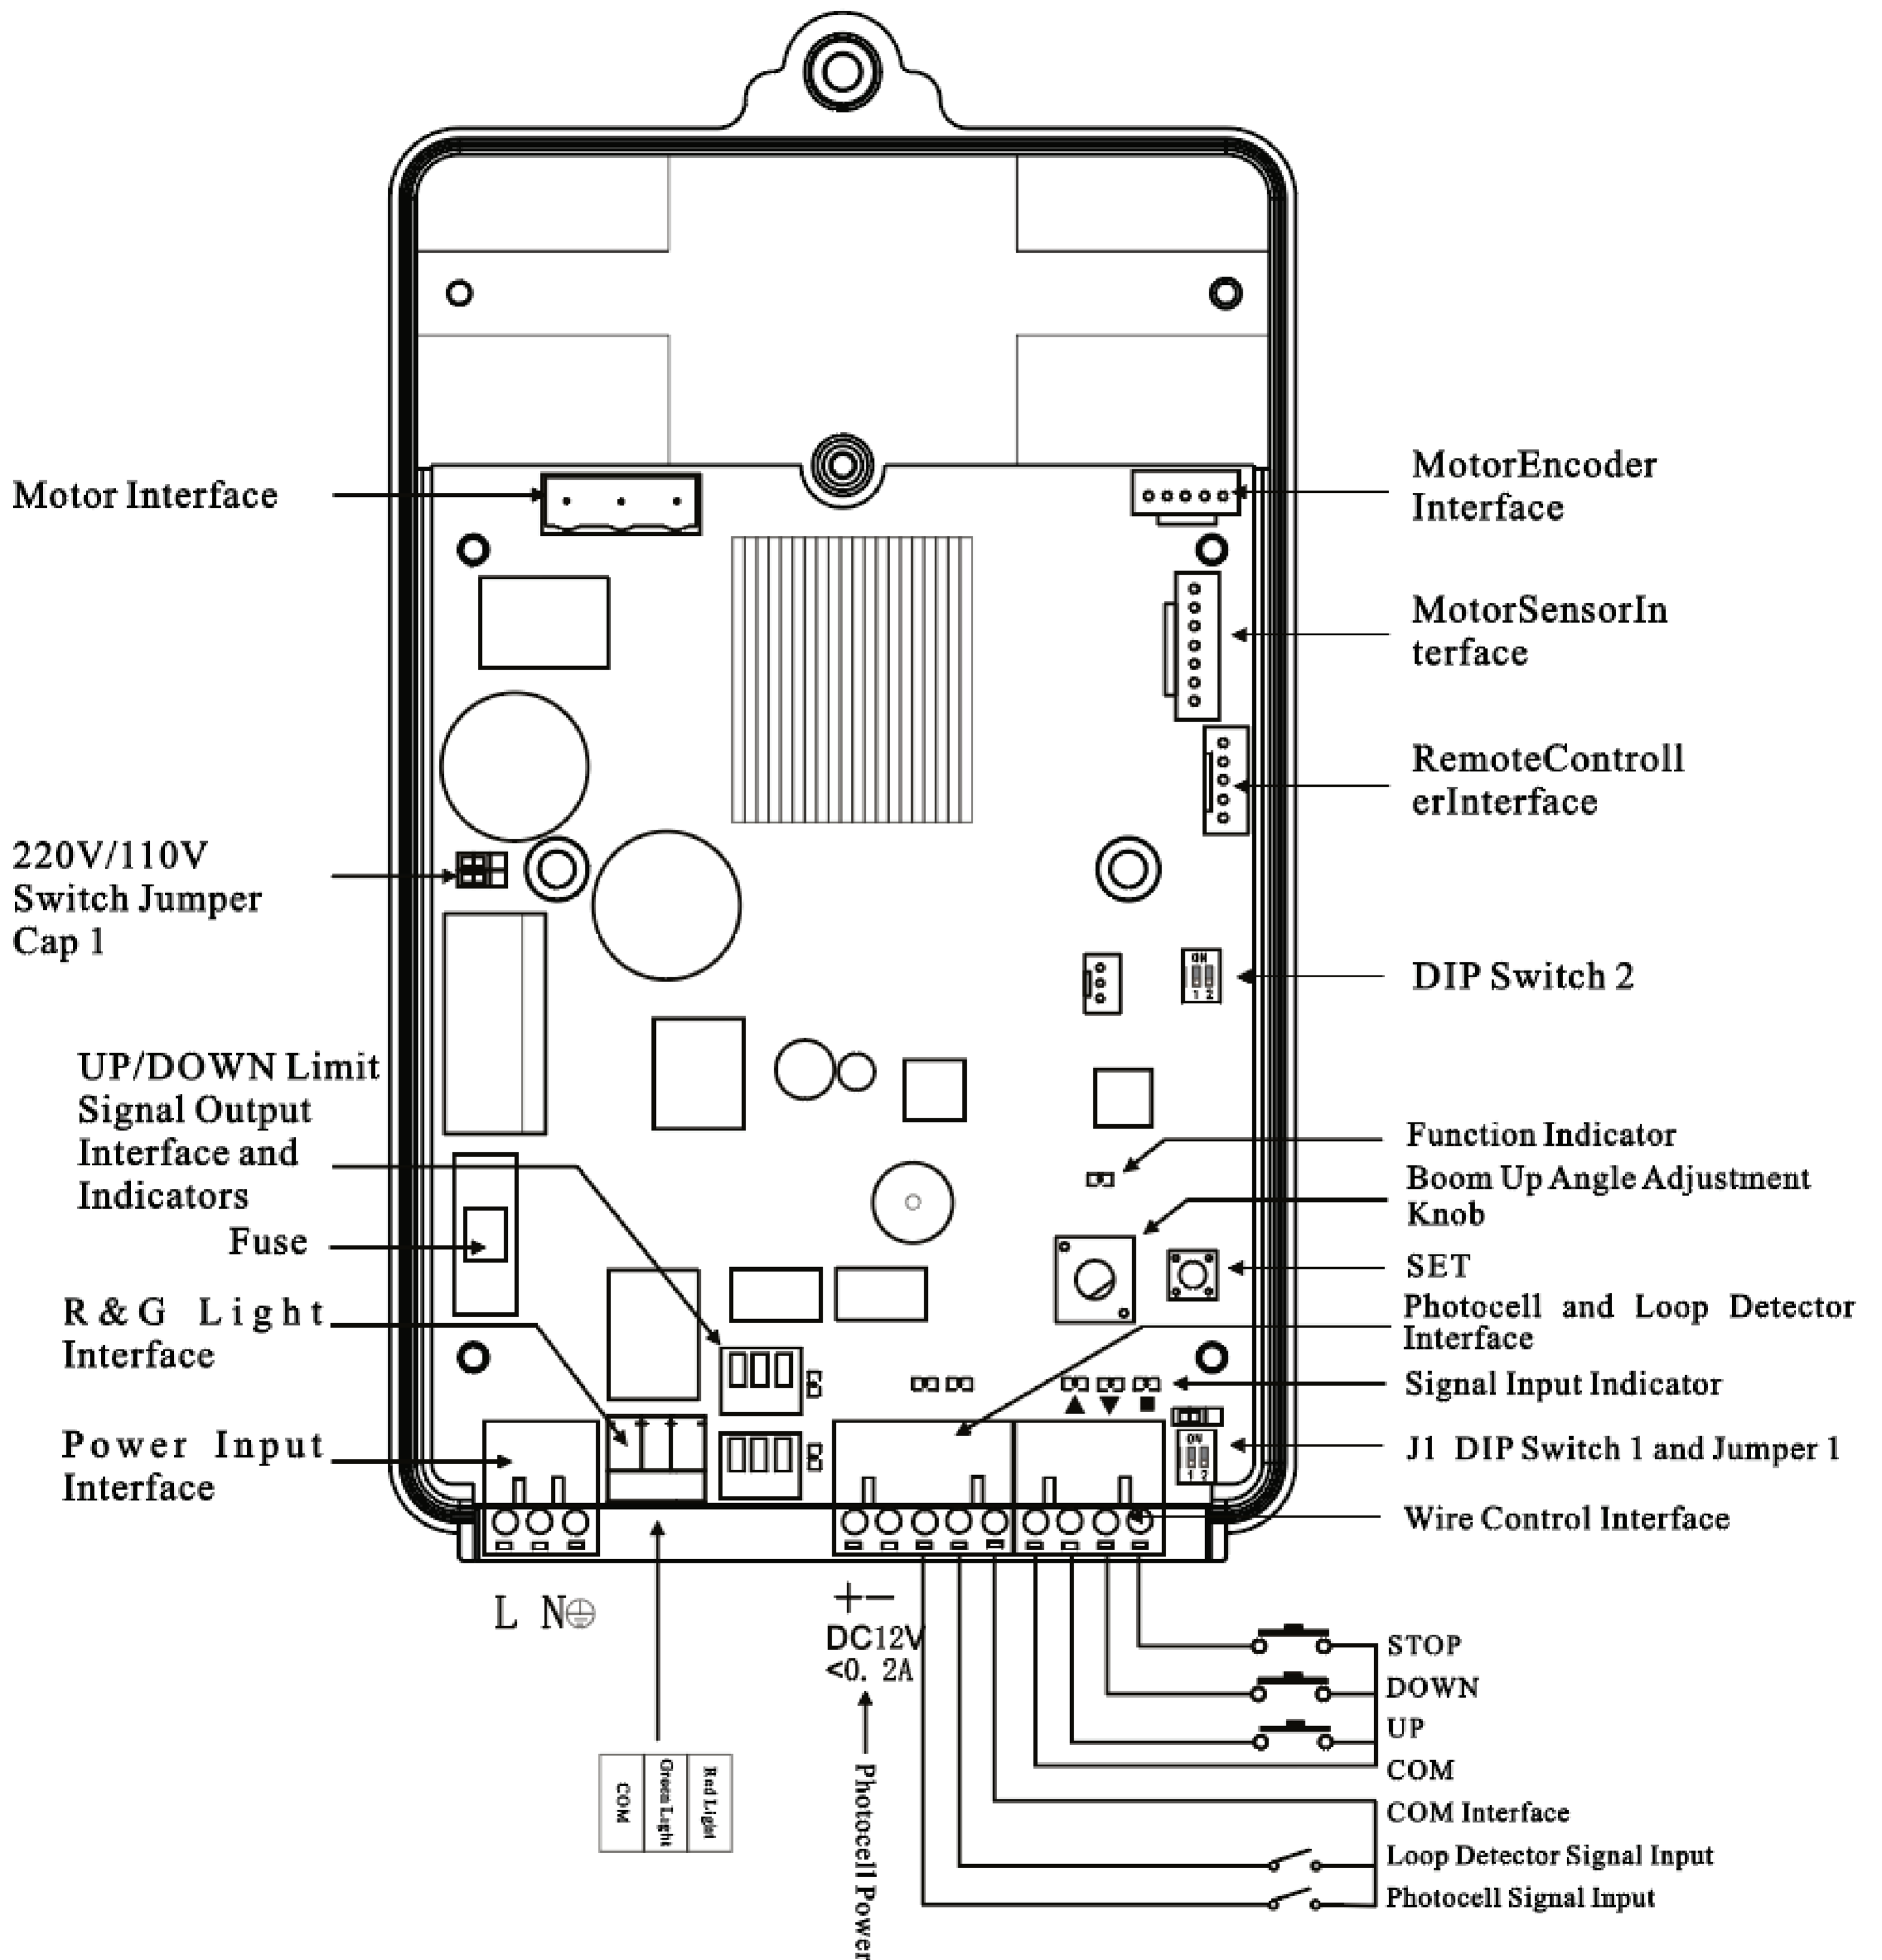


## DC Servo Barrier Gate Controller Panel Board

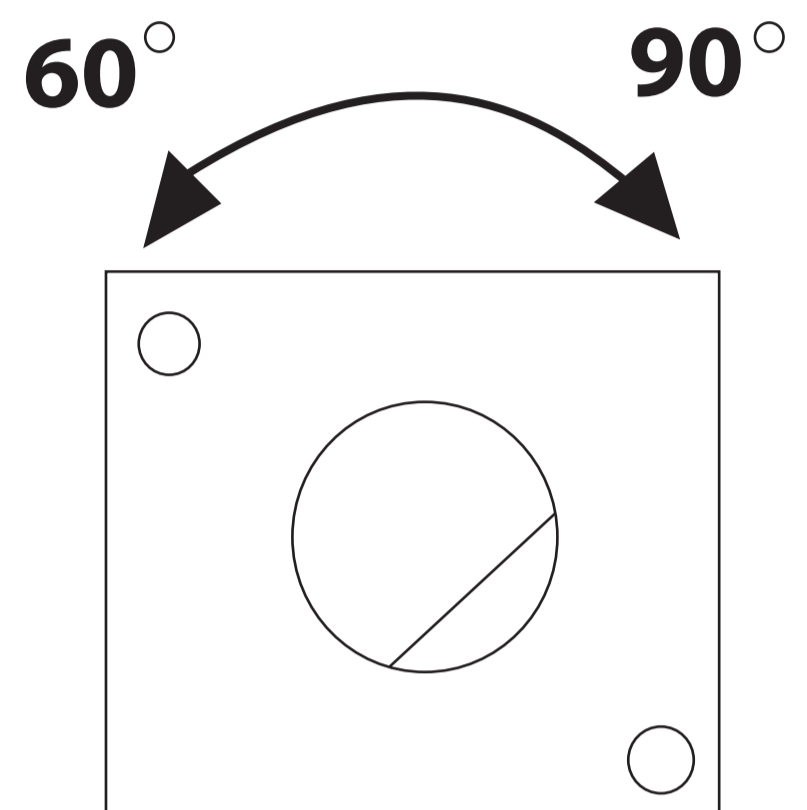

## DC Servo Barrier Gate Controller Panel Board

DIP Switch Setting	Delay Auto-closing Setting	DIP Switch Setting
<p><b>DIP Switch 1: Speed setting</b>                      ON/ON : 3S                      OFF/ON : 4S                      ON/OFF : 5S                      OFF/OFF : High intensity of auto reversing</p> <p><b>DIP Switch 2 :</b>  <b>DIP 1 : Signal type</b>                      OFF : Normal open                      ON : Normal close</p> <p><b>DIP 2 : Learning mode after power on</b>                      OFF : Boom up and down                      ON : Boom up only</p> <p><b>Jumper 1 : Auto-aging test</b>                      Left : Close                      Right : Open</p>	<p>Pressing and holding SET button then power on</p> <ul style="list-style-type: none"> <li>- If the Function Indicator constant lighting means delay auto-closing function is off.</li> <li>- If twinkling the twinkling time is the seconds of the delay auto-closing.</li> </ul> <p><b>Opening method :</b>                      Press UP button of the remote controller to open this function. After open, the delay auto-closing time is 3 seconds, each pressing of the UP button increases by 1 second, the max is 60 seconds.</p> <p><b>Closing method :</b>                      Press STOP button, the Function Indicator constant lighting means close.</p> <p><b>Read seconds :</b>                      Press DOWN button, the Function Indicator twinkling time is the seconds of the delay auto-closing.</p> <p><b>Release the SET button to save and start working.</b></p>	 <p>Counterclockwise to the end is 60° Clockwise to the end is 90°</p> <p>Middle is end is 60° - 85°</p>

### Horizontal and vertical fine adjustment

**Horizontal adjustment :**

In UP limit status, pressing and holding SET button, then press UP button (of the remote controller) (If angle over 90°) or DOWN button (If angle less than 90°) to adjust the value (0-25). Release the SET button, the adjustment is done when the boom open to the UP limit status next time.

**Vertical adjustment :**

In DOWN limit status, pressing and holding SET button, then press OPEN button (of the remote controller) (If angle less than 0°) or DOWN button (If angle over 0°) to adjust the value (0-40). Release the SET button, the adjustment is done when the boom close to the DOWN limit status next time.

**Note :**

During adjusting, when press STOP button, the twinkling times of the Function Indicator means the current adjusted value.