
WIRING DIAGRAM

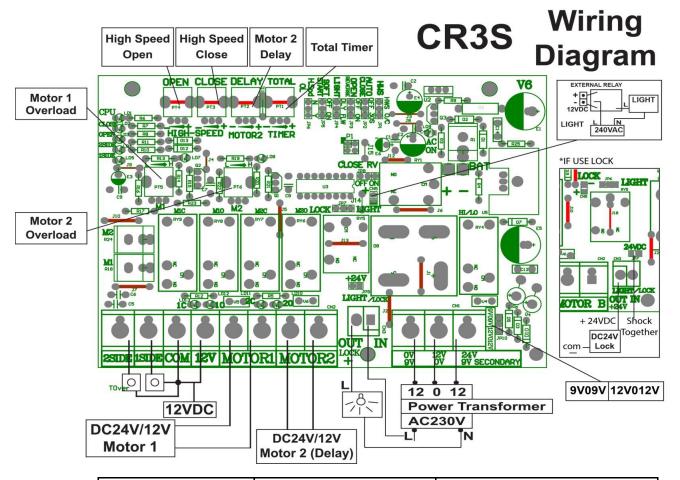

CR3S - Swing Panel Diagram



	Function options		Description	Application Notes
JP1		HWS	Open, Stop & Close	
		OP/CL	Open & Close only	
JP2	Auto Close	30 Sec	Gate auto close after	
			remained open for 30secs	
		OFF	Select if function not	
			required	
JP3	Open	ON	Open Revese enabled	If on, the movement of the gate is
	Reverse	OFF	Open Revese disabled	first reversed, then open
JP4		Follow	Light status & motor	Light is on when motor is on, light
	Light	TOHOW	movement in parallel	is off when motor is stopped
		Delay	Light status is set to be off	When gate is closed, light will be
		Delay	after a delay of 30 seconds	off after 30 sec
JP5	Soft Start	ON	Soft Start enabled	Firmwa <u>re</u> Run at 3speed
	Soft Start	OFF	No Soft Start function	Slow 🛛 Fast 🖾 Slow
JP6	HI Speed	ON	Hi Speed Over Load ON	
	Over Load	OFF	NO Hi Speed Over Load	
JP7		LIGHT	Light feature	If use lock, soft start off, use
		LOCK	Lock feature	jumper short to +24V
		LOCK	Lock reature	WIRE lock(+) out & (-)com
JP8	Close Reverse	OFF	Close Reverse Disabled	When enabled, reverse voltage is provided after gate closed for 5
		ON	Close Reverse Enabled	sec