

# MAGELLAN™


## K10V/H - User's Quick Reference Guide


### KEYPAD OVERVIEW

**Partition 1 Status**    **Partition 2 Status**

**Arm (red), Sleep (yel), Stay (grn):**  
 On = Partition armed  
 Off = Partition disarmed  
 Flash = Exit Delay  
 Fast Flash\* = Exit Delay (final 10 sec.)  
 Fast Flash\* = Partition in alarm

\* Audible Indicators:  
 Continuous beep = Alarm  
 Variable beep = Fire alarm  
 Intermittent beep = Beginning of exit delay  
 Fast beep = Final 10 sec. of exit delay

 = Press once + **[MASTER CODE]** for Quick Menu Programming



**Off Light (red):**  
 On = Disarmed  
 Off = System armed

**AC Light**  
 On = Power on  
 Off = Power off

**Zone Display:**  
 Keys [1] to [0(10)] correspond to zones 1 to 10 respectively.  
 Key Lit: Open or entry delay  
 Key Flash: In alarm

**[TBL]** Trouble display  
 On = Trouble(s) occurring

**[MEM]** Alarm memory display  
 On = Alarm(s) occurred

**[BYP]** Bypass programming  
 On = Zone(s) bypassed

### ARMING AND DISARMING

**TO ARM  
WHEN LEAVING...**



**TO ARM  
WHEN STAYING...**



#### To Regular Arm:

1. Close all zones in the desired partition.
2. Press **[ARM]**.
3. Enter your **[ACCESS CODE]\***.

#### To Stay Arm:

1. Press the **[STAY]** key.
2. Enter your **[ACCESS CODE]\***.

#### To Sleep Arm:

1. Press the **[SLEEP]** key.
2. Enter your **[ACCESS CODE]\***.

**To Disarm:**  
**[OFF] + [ACCESS CODE]\***

*\* If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.*



## PANIC ALARMS

To send a silent or audible alarm to your Security Company, press and hold one of the button combinations listed for 3 seconds.

Panic Alarm Type	Button Combinations
Police	Press [1] & [3]
Medical	Press [4] & [6]
Fire	Press [7] & [9]

## TROUBLE DISPLAY

When a trouble condition occurs, the **[TBL]** key will illuminate.

1. Press the **[TBL]** key. The key will flash and number(s) corresponding to the trouble(s) will illuminate.
2. Read the corresponding explanation from the trouble list in the MG5000 User Guide.
3. Press the **[CLEAR]** key to exit.

## BYPASS PROGRAMMING

Bypassed zones remained unarmed when the partition is armed.

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]\***.
3. The corresponding key of all open zones will illuminate. Select the zone(s) you want to bypass by entering the one-digit zone number. The zone key will flash.
4. Press the **[ENTER]** key to save and exit.

## ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the **[MEM]** key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will illuminate.
4. Press the **[CLEAR]** key to exit.

## KEYPAD SETTINGS

To mute the keypad:

Press and hold the **[CLEAR]** key for 6 seconds to enable or disable Keypad Muting.

To modify the backlight:

1. Press and hold the **[MEM]** key for 3 seconds.
2. The **[MEM]** key will illuminate.
3. Press the **[MEM]** key to set the desired backlight level.
4. Press **[CLEAR]** or **[ENTER]** to exit.

## CHIME PROGRAMMING

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

1. Press & hold the corresponding zone key for 3 seconds (Accept beep = Chime enabled, Fail beep = Chime disabled).

© Paradox Security Systems Ltd., 2005-2015.  
Magellan is a trademark or registered trademark of Paradox Security Systems (Bahamas) Ltd. and its affiliates in Canada, the United States and/or other countries. All rights reserved.